



SECTION MT

MANUAL TRANSMISSION

CONTENTS

- Oil seal
- Shifting rod
- Wash
- Slipper guide pin
- Return spring plunger
- Reverse check spring
- Return spring plug
- Check ball plug
- Check spring
- Check ball
- Interlock ball
- Following pin
- 2nd shift fork
- 3rd shift fork
- 4th shift fork
- 5th shift fork

4-SPEED TRANSMISSION

(Type : F4W71B)

REMOVAL	MT- 2
INSTALLATION	MT- 3
DISASSEMBLY	MT- 4
TRANSMISSION CASE AND REAR EXTENSION	MT- 5
GEAR ASSEMBLY	MT- 5
REAR EXTENSION	MT- 7
ADAPTER PLATE	MT- 7
INSPECTION	MT- 7
TRANSMISSION CASE AND REAR EXTENSION	MT- 7
BEARINGS	MT- 7
GEARS AND SHAFTS	MT- 7
BAULK RING	MT- 8
SHIFTING INSERT	MT- 8
OIL SEALS	MT- 8
REAR ENGINE MOUNTING INSULATOR	MT- 8
ASSEMBLY	MT- 8
FRONT COVER ASSEMBLY	MT- 8
REAR EXTENSION ASSEMBLY	MT- 8
ADAPTER PLATE	MT- 9
GEARS	MT- 9
TRANSMISSION CASE AND REAR EXTENSION	MT-12

5-SPEED TRANSMISSION

(Type : FS5W71B)

REMOVAL AND INSTALLATION	MT-14
DISASSEMBLY	MT-15
TRANSMISSION CASE AND REAR EXTENSION	MT-15
GEAR ASSEMBLY	MT-15
REAR EXTENSION	MT-16
ADAPTER PLATE	MT-16
INSPECTION	MT-16
ASSEMBLY	MT-16
FRONT COVER ASSEMBLY	MT-16
REAR EXTENSION ASSEMBLY	MT-16
ADAPTER PLATE	MT-16
GEARS	MT-16
TRANSMISSION CASE AND REAR EXTENSION	MT-17

SERVICE DATA AND SPECIFICATIONS

GENERAL SPECIFICATIONS	MT-17
INSPECTION AND ADJUSTMENT	MT-18
TIGHTENING TORQUE	MT-19

TROUBLE DIAGNOSES AND CORRECTIONS


SPECIAL SERVICE TOOLS	MT-20
-----------------------	-------

CAUTION	MT-21
---------	-------

MT




4-SPEED TRANSMISSION (Type : F4W71B)

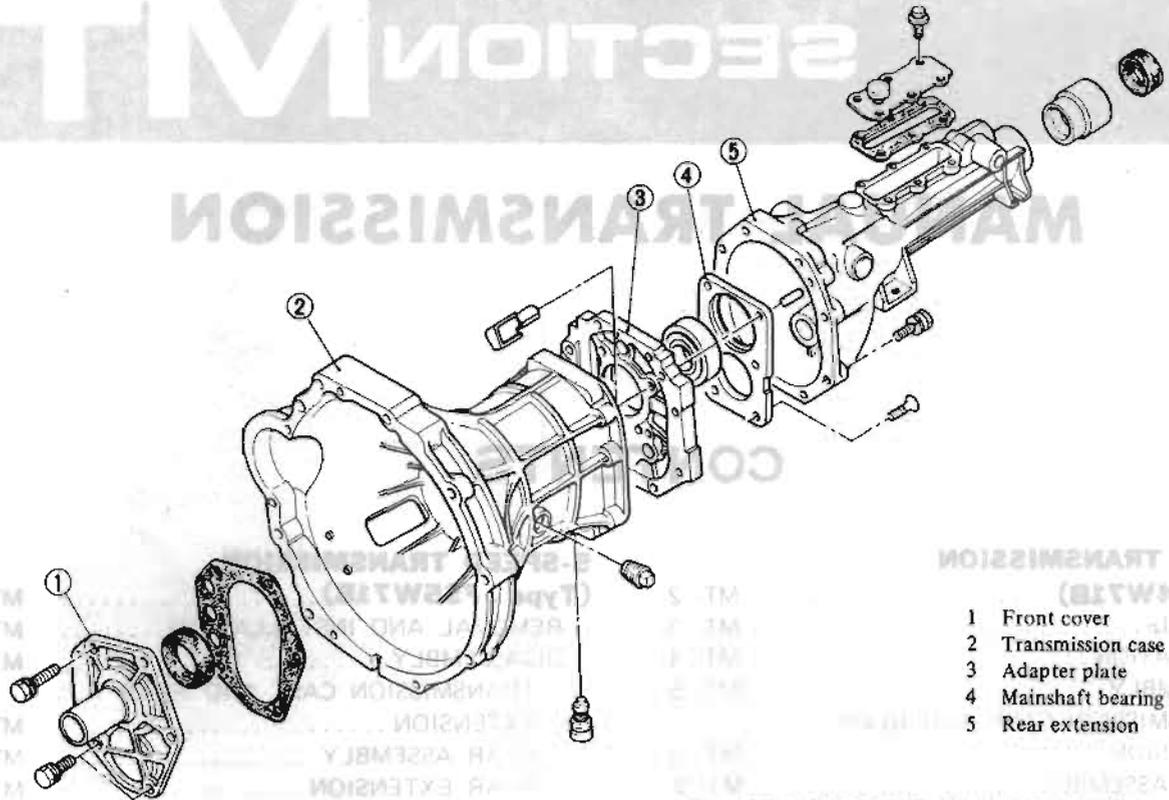

- 1 Front cover
- 2 Transmission case
- 3 Adapter plate
- 4 Mainshaft bearing retainer
- 5 Rear extension

TM858


Fig. MT-1 F4W71B Transmission Case Components

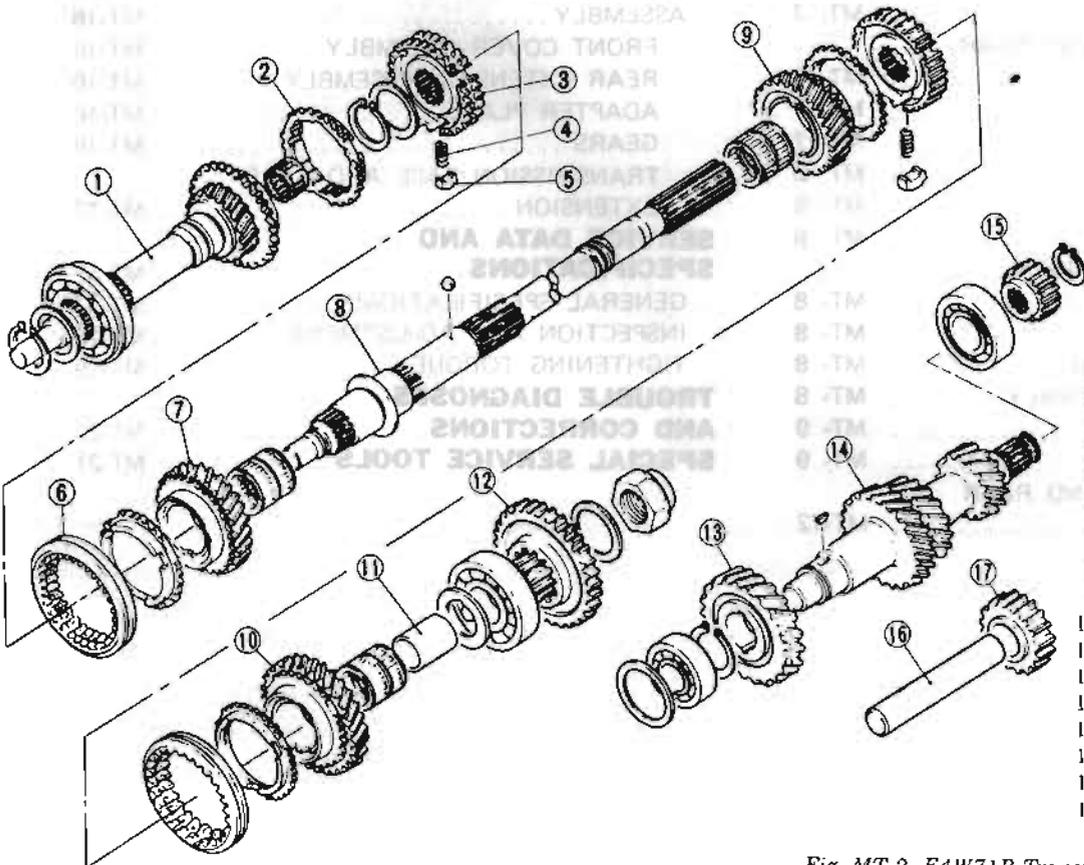

- 1 Main drive gear shaft
- 2 Baulk ring
- 3 Synchronizer hub, 3rd & 4th
- 4 Shifting insert spring
- 5 Shifting insert
- 6 Coupling sleeve
- 7 3rd main gear
- 8 Mainshaft
- 9 2nd main gear
- 10 1st main gear
- 11 1st gear spacer
- 12 Reverse main gear
- 13 Counter drive gear
- 14 Counter gear
- 15 Reverse counter gear
- 16 Reverse idler shaft
- 17 Reverse idler gear

TM857

Fig. MT-2 F4W71B Transmission Gear Components

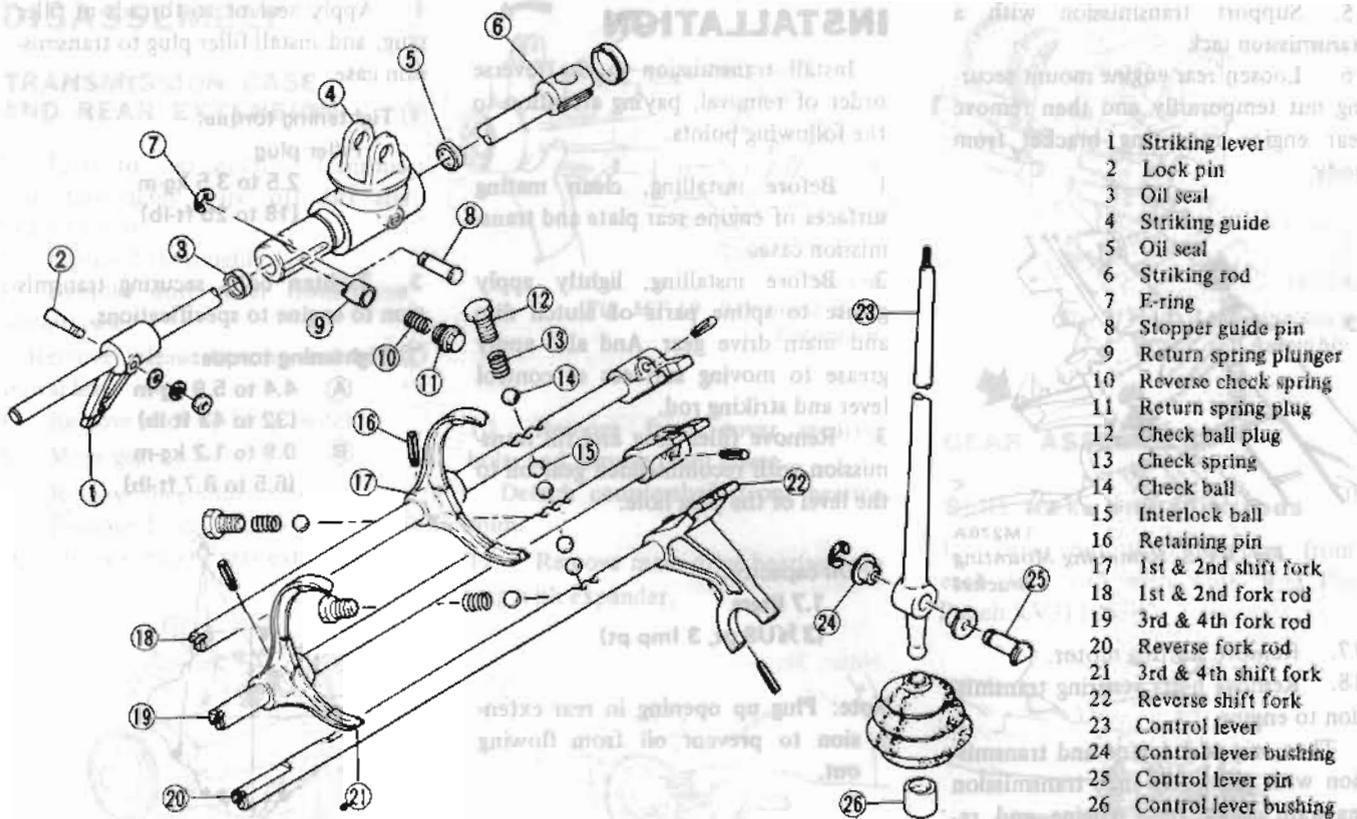

TM045A


Fig. MT-3 F4W71B Transmission Shift Control Components

REMOVAL

In dismantling transmission from the car, proceed as follows:

1. Disconnect battery ground cable from terminal.
2. Disconnect accelerator linkage.
3. Remove console.
- Refer to Console (Section BF) for removal and installation.
4. Remove control lever boots.
5. Place transmission control lever in neutral position.

Remove E-ring and control lever pin from transmission striking rod guide, and remove control lever.

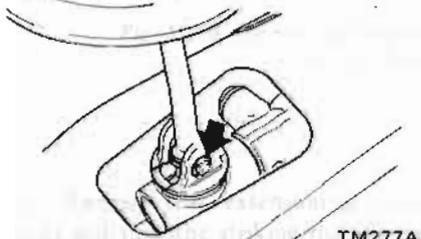

TM277A

Fig. MT-4 Removing Control Lever

6. Jack up the car and support its weight on safety stands. Use a hydrau-


lic hoist or open pit, if available.

Confirm that safety is insured.

7. Disconnect exhaust front tube from exhaust manifold.
8. Remove front tube bracket from rear extension housing. Refer to Section FE for Removal.

Note: Hold front tube end up with a thread or wire to prevent tube from falling.

9. Disconnect wires from back-up lamp switch.

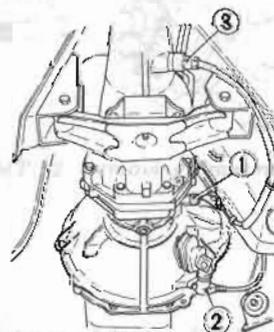

- 1 Back-up lamp switch
- 2 Clutch operating cylinder
- 3 Speedometer cable

TM144A

Fig. MT-5 Bottom View of Car

10. Remove clutch operating cylinder from transmission case.
11. Disconnect speedometer cable from rear extension.
12. Remove heat shield plate. Refer to Section FE for removal.
13. Remove propeller shaft. Refer to Section PD.

CAUTION:

Remove propeller shaft carefully so as not to damage spline, sleeve yoke and rear oil seal.


Note: Plug up the opening in the rear extension housing to prevent oil from flowing out.

14. Support the engine by placing a jack under oil pan with a wooden block used between oil pan and jack.

CAUTION:

Do not place the jack under the oil pan drain plug.

15. Support transmission with a transmission jack.
16. Loosen rear engine mount securing nut temporarily and then remove rear engine mounting bracket from body.

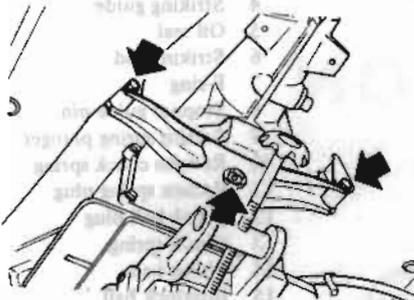

TM278A

Fig. MT-6 Removing Mounting Bracket

17. Remove starting motor.
18. Remove bolts securing transmission to engine.

Then, support engine and transmission with jack, and slide transmission rearward away from engine and remove from car.

CAUTION:

Take care in dismantling the transmission not to strike any adjacent parts and main drive shaft.

INSTALLATION

Install transmission in the reverse order of removal, paying attention to the following points.

1. Before installing, clean mating surfaces of engine rear plate and transmission case.
2. Before installing, lightly apply grease to spline parts of clutch disc and main drive gear. And also apply grease to moving surfaces of control lever and striking rod.
3. Remove filler plug and fill transmission with recommended gear oil to the level of the plug hole.

Oil capacity:
1.7 liters
(3 5/8 US pt, 3 Imp pt)

Note: Plug up opening in rear extension to prevent oil from flowing out.

4. Apply sealant to threads of filler plug, and install filler plug to transmission case.


Tightening torque:

Filler plug
2.5 to 3.5 kg-m
(18 to 25 ft-lb)

5. Tighten bolts securing transmission to engine to specifications.

Tightening torque:

- A 4.4 to 5.9 kg-m
(32 to 43 ft-lb)
- B 0.9 to 1.2 kg-m
(6.5 to 8.7 ft-lb)

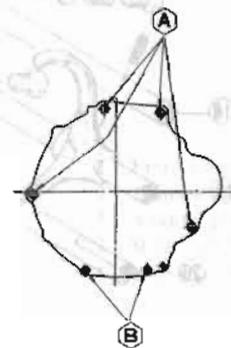

TM773

Fig. MT-7 Tightening Torque

DISASSEMBLY

TRANSMISSION CASE AND REAR EXTENSION

1. Prior to disassembling transmission, thoroughly wipe off dirt and grease from it.

2. Drain oil thoroughly.

3. Remove dust cover from transmission case.


Remove release bearing and withdrawal lever.

4. Remove back-up lamp switch.

5. Move gear to Neutral.

6. Remove speedometer pinion.


7. Remove E-ring and stopper guide pin from rear end of rear extension.

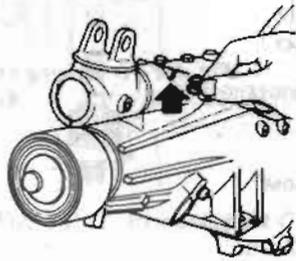

TM337

Fig. MT-8 Removing Striking Rod E-ring and Stopper Pin

8. Remove return spring plug, return spring, reverse check spring, and plunger from rear extension.

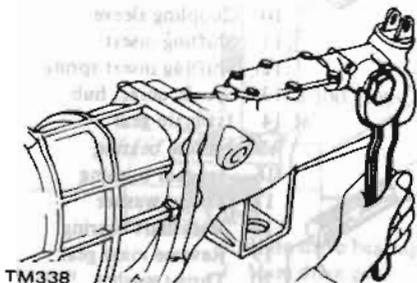


TM338

Fig. MT-9 Removing Return Spring Plug

9. Remove rear extension securing bolts and turn the striking rod toward left.

Drive out rear extension backward by lightly tapping around it with a soft hammer.

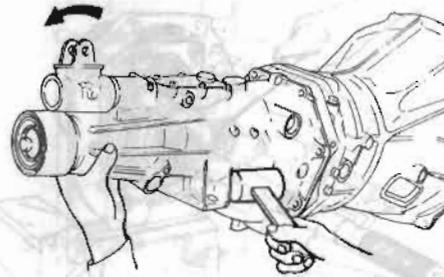


TM339

Fig. MT-10 Removing Rear Extension

10. Remove front cover securing bolts and remove front cover.

Detach countershaft front bearing shim.


11. Remove main drive bearing snap ring with expander.

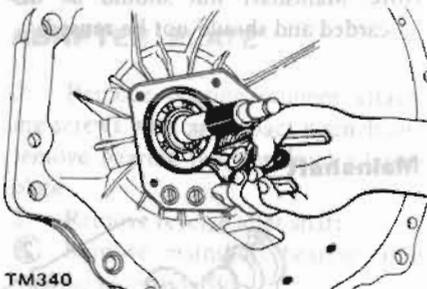

TM340

Fig. MT-11 Removing Main Drive Bearing Snap Ring

12. Separate transmission case from adapter plate with a soft hammer.

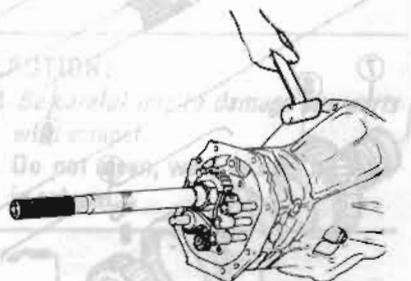


TM341

Fig. MT-12 Removing Transmission Case

13. Set up Adapter Setting Plate ST23810001 on adapter plate.

With countershaft side up, place the above assembly in a vise.

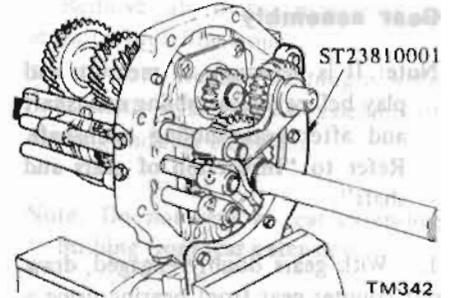

ST23810001


TM342

Fig. MT-13 Attaching Gear Assembly

GEAR ASSEMBLY

Shift forks and fork rods

1. Drive out retaining pins from each fork rod with Fork Rod Pin Punch KV31100300.

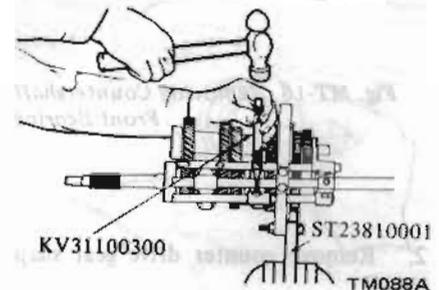

KV31100300


ST23810001

TM088A

Fig. MT-14 Drive Out Retaining Pins

2. Remove three check ball plugs, and drive out fork rods from adapter plate by lightly tapping on the front end.

Be careful not to lose three check balls and four interlock balls.

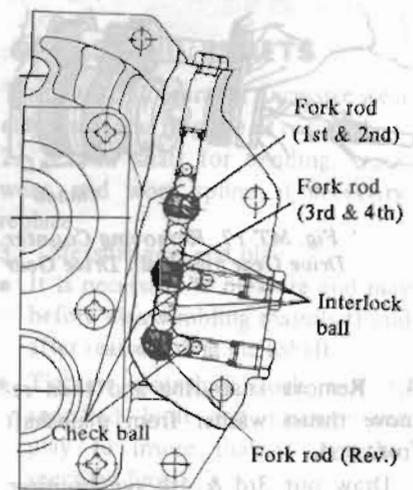

Fork rod (1st & 2nd)

Fork rod (3rd & 4th)

Interlock ball

Check ball

Fork rod (Rev.)


TM344

Fig. MT-15 Check Ball and Interlock Ball

Gear assembly

Note: It is necessary to measure end play before disassembling mainshaft and after reassembling mainshaft. Refer to "Inspection of gears and shaft".

1. With gears doubly engaged, draw out counter gear front bearing using a suitable gear puller.

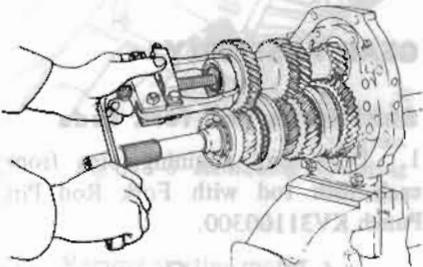


TM398

Fig. MT-16 Removing Countershaft Front Bearing

2. Remove counter drive gear snap ring.

3. Draw out counter drive gear with main drive gear by means of a gear puller.

When drawing out main drive gear assembly, be careful not to drop pilot needle bearing onto floor from the front end of mainshaft.

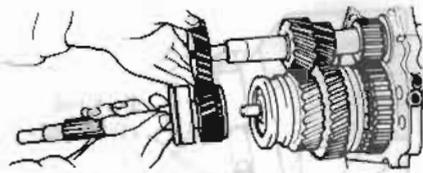


TM345

Fig. MT-17 Removing Counter Drive Gear and Main Drive Gear

4. Remove snap ring and then remove thrust washer from mainshaft front end.

Draw out 3rd & 4th synchronizer assembly and remove 3rd gear.

5. Release staking on mainshaft nut and loosen it.

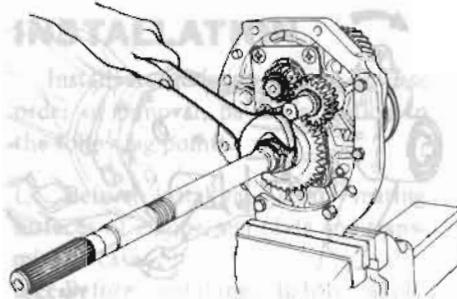

TM346

Fig. MT-18 Removing Mainshaft Nut


6. Remove mainshaft nut, thrust washer and reverse main gear.

Note: Mainshaft nut should be discarded and should not be reused.

7. Remove snap ring of countershaft rear end, and remove reverse counter gear.

8. Draw out mainshaft assembly together with counter gear by lightly tapping the rear end with a soft hammer while holding the front of mainshaft assembly by hand.


Be careful not to drop counter gear.

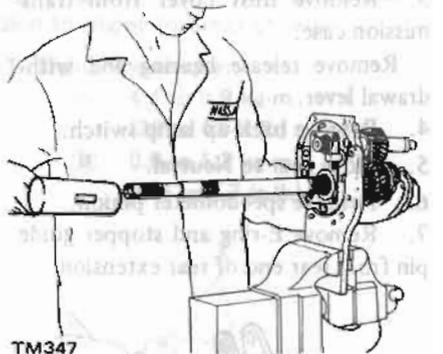

TM347

Fig. MT-19 Driving Out Gear Assembly

Mainshaft

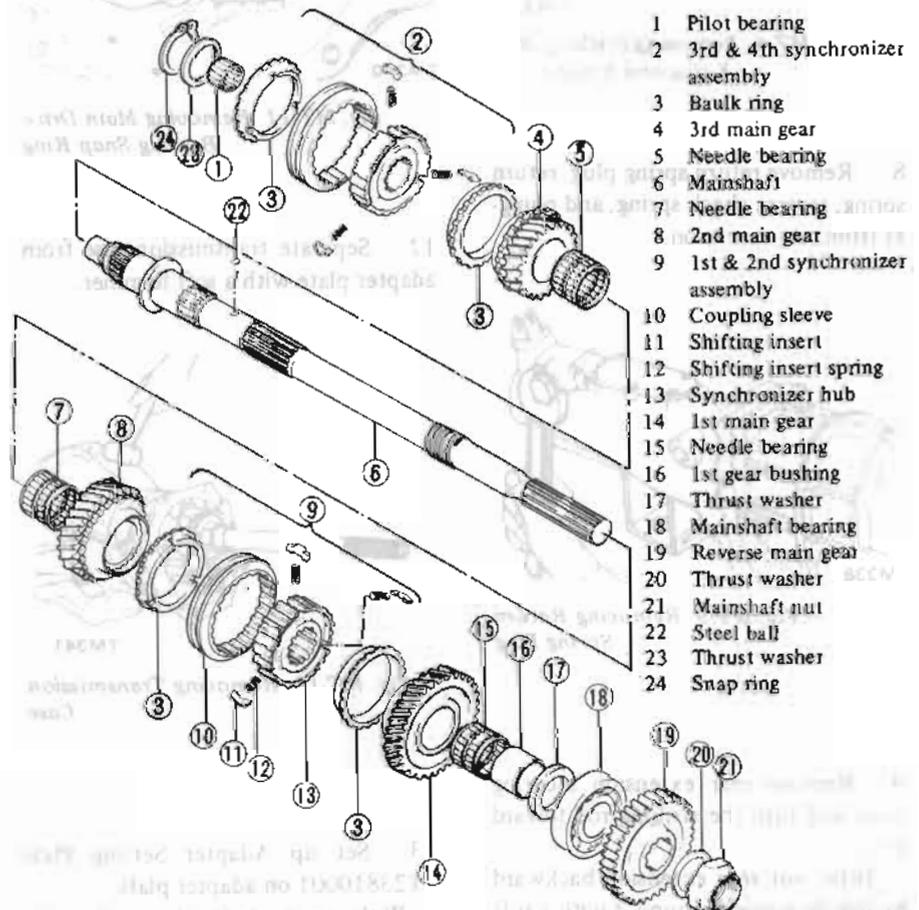

- 1 Pilot bearing
- 2 3rd & 4th synchronizer assembly
- 3 Baulk ring
- 4 3rd main gear
- 5 Needle bearing
- 6 Mainshaft
- 7 Needle bearing
- 8 2nd main gear
- 9 1st & 2nd synchronizer assembly
- 10 Coupling sleeve
- 11 Shifting insert
- 12 Shifting insert spring
- 13 Synchronizer hub
- 14 1st main gear
- 15 Needle bearing
- 16 1st gear bushing
- 17 Thrust washer
- 18 Mainshaft bearing
- 19 Reverse main gear
- 20 Thrust washer
- 21 Mainshaft nut
- 22 Steel ball
- 23 Thrust washer
- 24 Snap ring

TM127A

Fig. MT-20 Mainshaft Assembly

1. Remove thrust washer, steel ball, 1st gear and needle bearing. Be careful not to lose steel ball retaining thrust washer.
2. Press out 1st gear mainshaft bushing together with 2nd gear and 1st & 2nd synchronizer using Bearing Puller ST30031000.

Note: When pressing out bushing, hold mainshaft by hand so as not to drop it.

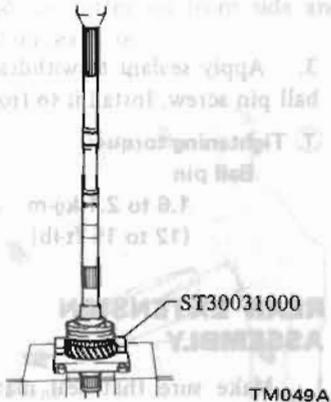


Fig. MT-21 Removing 1st Gear Bushing

Main drive gear

1. Remove main drive gear snap ring and spacer.
2. Remove main drive bearing with Bearing Puller ST30031000 and a suitable press.

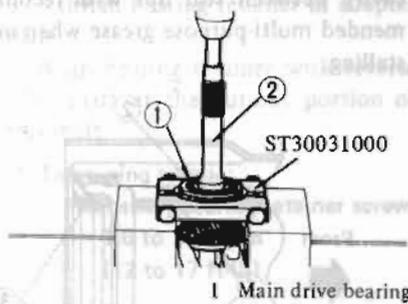


Fig. MT-22 Removing Main Drive Bearing

Counter gear

Press out counter gear rear bearing using Bearing Puller ST30031000.

Note: When pressing out bearing, hold shaft by hand so as not to drop shaft onto floor.

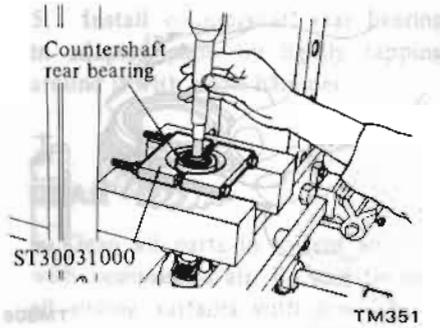


Fig. MT-23 Removing Countershaft Bearing

REAR EXTENSION

Remove lock pin from striking lever, and remove striking rod.

Note: Do not disassemble rear extension bushing from rear extension.

ADAPTER PLATE

1. Remove bearing retainer attaching screws with an impact wrench and remove bearing retainer from adapter plate.
2. Remove reverse idler shaft.
3. Remove mainshaft bearing from the rear extension side.

INSPECTION

Wash all parts in a suitable cleaning solvent and check for wear, damage or other faulty conditions.

CAUTION:

- a. Be careful not to damage any parts with scraper.
- b. Do not clean, wash or soak oil seals in solvent.

TRANSMISSION CASE AND REAR EXTENSION

1. Clean with solvent thoroughly and check for cracks which might cause oil leak or other faulty conditions.
2. Check mating surface of the case to engine or adapter plate for small nicks, projection or sealant.

Remove all nicks, projection or sealant with a fine stone.

3. If rear extension bushing is worn or cracked, replace it as an assembly of bushing and rear extension.

Note: Do not remove rear extension bushing from rear extension.

BEARINGS

1. Thoroughly clean bearing and dry with a compressed air.

CAUTION:

Do not allow the bearings to spin. Because it will damage the race and balls. Turn them slowly by hand.

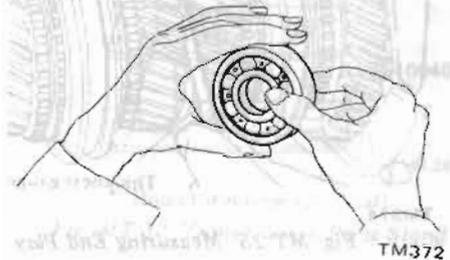


Fig. MT-24 Inspecting Ball Bearing

2. When race and ball surfaces are worn or rough, or when balls are out-of-round or rough, replace bearing with a new one.
3. Replace needle bearing if worn or damaged.

GEARS AND SHAFTS

1. Check all gears for excessive wear, chips or cracks; replace as required.
2. Check shaft for bending, crack, wear, and worn spline; if necessary, replace.
3. Measure gear end play:
 - It is necessary to measure end play before disassembling mainshaft and after reassembling mainshaft.
 - Tighten mainshaft lock nut to specified limit and measure end play to insure that it is within specified limit.
 - If end play is not within specified limit, disassemble and check parts for condition.

- Replace any part which is worn or damaged.

Standard end play:

1st gear:

0.27 to 0.34 mm
(0.0106 to 0.0134 in)

2nd gear:


0.12 to 0.19 mm
(0.0047 to 0.0075 in)

3rd gear:

0.13 to 0.37 mm
(0.0051 to 0.0146 in)

Reverse counter gear:

Less than 0.20 mm
(0.0079 in)

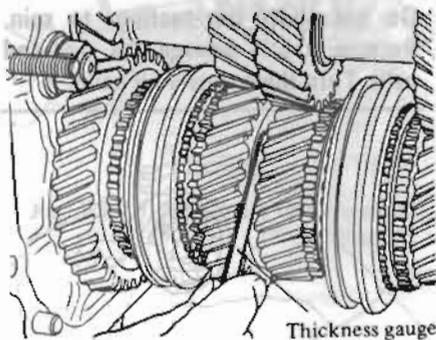

TM374

Fig. MT-25 Measuring End Play

4. Check for stripped or damaged speedometer pinion gear. If necessary, replace.

BAULK RING

1. Replace baulk ring if found to be deformed, cracked or otherwise damaged excessively.
2. Place baulk ring in position on gear cone.

While holding baulk ring against gear as far as it will go, measure gap between baulk ring and outer gear.

If the clearance is smaller than allowable limit, discard baulk ring.


Baulk ring to gear clearance:

Standard

1.2 to 1.6 mm
(0.047 to 0.063 in)

Wear limit

Less than 0.80 mm
(0.0315 in)

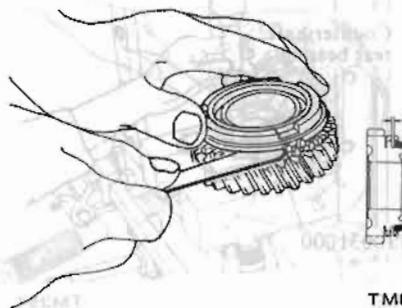

TM806

Fig. MT-26 Baulk Ring to Gear Gap

SHIFTING INSERT

Replace, if worn excessively, worn unevenly, deformed, or damaged.

OIL SEALS

1. Discard O-ring or oil seal which is once removed. Replace oil seal if sealing lip is deformed or cracked. Also discard oil seal if spring is out of position.
2. Check the oil seal lip contacting with shaft; if necessary replace oil seal and shaft as a set.

REAR ENGINE MOUNTING INSULATOR

Replace rear engine mounting insulator, if weakened, deteriorated, or cracked.

ASSEMBLY

To assemble, reverse the order of disassembly. Observe the following instructions.


FRONT COVER ASSEMBLY

1. Make sure that seal mating surface is clean.

Using a press and Oil Seal Drift ST35360000 drive new seal into place on front cover.

Note: When pressing oil seal into place, apply coat of gear oil to surface adjoining oil seal.

2. Lubricate seal lip and main drive shaft with gear oil when installing front cover.

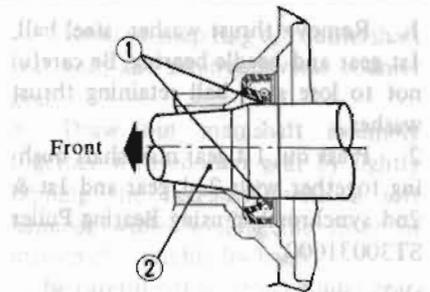

- 1 Gear oil
- 2 Main drive shaft

TM105A

Fig. MT-27 Front Cover Oil Seal

3. Apply sealant to withdrawal lever ball pin screw. Install it to front cover.

Tightening torque:

Ball pin

1.6 to 2.1 kg-m
(12 to 15 ft-lb)


REAR EXTENSION ASSEMBLY

1. Make sure that seal mating surface is clean.

Using a press and Oil Seal Drift KV38104010, drive new seal into place on rear extension.

Note: When pressing oil seal into place, apply coat of gear oil to surface adjoining oil seal

2. Coat oil seal lip and bushing with gear oil for initial lubrication. Pack cavity between seal lips with recommended multi-purpose grease when installing.

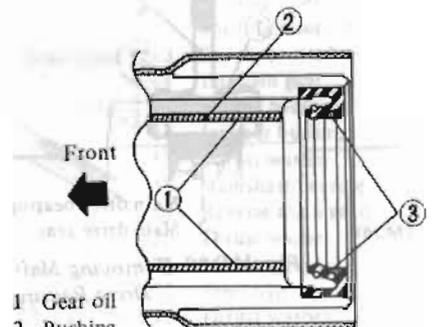

- 1 Gear oil
- 2 Bushing
- 3 Grease

TM214A

Fig. MT-28 Rear Extension Oil Seal

Insert striking rod with striking rod guide through rear extension.

3. Install striking lever on front end of striking rod. Install lock pin and nut, and tighten it.

Tightening torque:

Striking lever lock nut
0.9 to 1.2 kg-m
(6.5 to 8.7 ft-lb)

ADAPTER PLATE

1. Place dowel pin, mainshaft bearing and oil gutter on adapter plate, and tap with a soft hammer until they are properly positioned in place.

Use a new dowel pin.

Bend oil gutter on front side and expand on rear side.

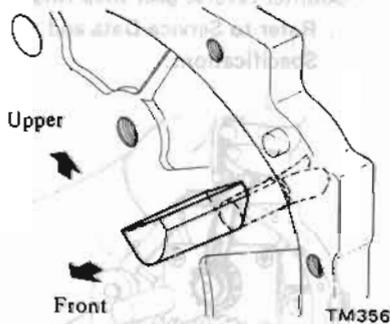


Fig. MT-29 Oil Gutter

2. Insert reverse idler shaft in adapter plate.

Note: Make sure that the cut-out portion of reverse idler shaft is lined up with inner face of adapter plate.

3. Install bearing retainer in adapter plate.

Align bearing retainer with reverse idler shaft at the cut-out portion of this shaft.

Tightening torque:

Mainshaft bearing retainer screw
1.6 to 2.3 kg-m
(12 to 17 ft-lb)

4. Stake each screw at two points with a punch.

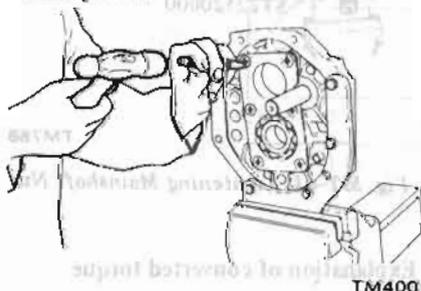


Fig. MT-30 Staking Screw

5. Install countershaft rear bearing in adapter plate by lightly tapping around it with a soft hammer.

GEAR

Clean all parts in solvent and dry with compressed air. Be sure to coat all sliding surfaces with gear oil for initial lubrication.

Synchronizer

Assemble synchronizer assembly.

Position shifting insert springs and shifting inserts in three slots in synchronizer hub; put coupling sleeve on synchronizer hub.

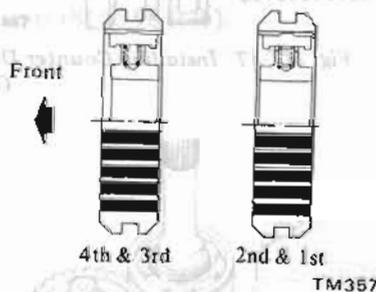


Fig. MT-31 Installing Synchronizer Hub

Main drive gear

1. Using Transmission Adapter ST23800000, press main drive bearing onto the shaft of main drive gear.

Note: Make sure that snap ring groove on shaft clears bearing.

2. Place main drive bearing spacer on main drive bearing and secure main drive bearing with thicker snap ring that will eliminate end play.

Main drive gear snap ring:
Refer to Service Data and Specifications.

Gear assembly

1. Assemble 2nd gear needle bearing, 2nd gear, baulk ring, 1st & 2nd speed synchronizer assembly, 1st gear baulk ring, 1st gear bush, needle bearing, 1st gear, steel ball, and thrust washer on mainshaft. Before installing a steel ball, apply grease to it.

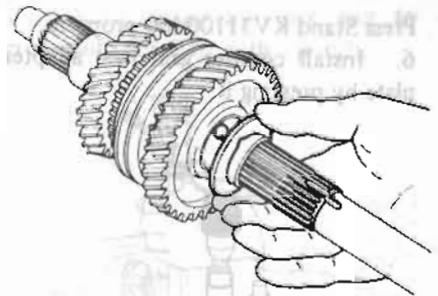


Fig. MT-32 Installing Thrust Washer

2. Set Transmission Press Stand KV31100400 and place adapter plate assembly on it.

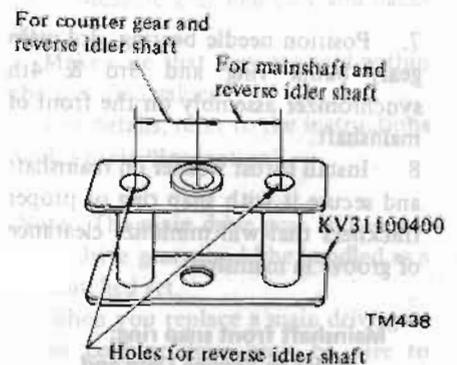


Fig. MT-33 Transmission Press Stand

3. Install mainshaft assembly to adapter plate assembly. Be sure to place bearing squarely against shaft and press it into place on shaft gradually.



Fig. MT-34 Installing Mainshaft Assembly

4. Place new woodruff keys in grooves in counter gear and tap them lightly until they are seated securely.

Use a soft hammer to avoid damaging keys.

5. Place adapter plate assembly and mainshaft assembly so that counter gear rear bearing rests on Transmission

Press Stand KV31100400 properly.

6. Install counter gear into adapter plate by pressing it.

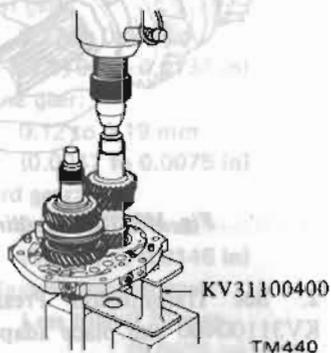


Fig. MT-35 Installing Counter Gear

7. Position needle bearing, 3rd main gear, baulk ring and 3rd & 4th synchronizer assembly on the front of mainshaft.

8. Install thrust washer on mainshaft and secure it with snap ring of proper thickness that will minimize clearance of groove in mainshaft.

Mainshaft front snap ring:
Refer to Service Data and Specifications.

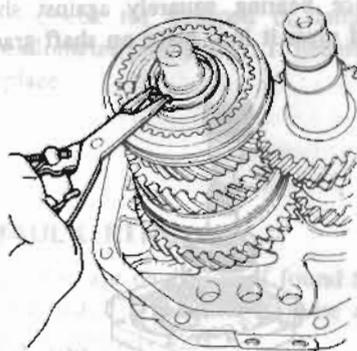


Fig. MT-36 Installing Snap Ring

9. Position baulk ring on cone surface of main drive gear. Apply gear oil to mainshaft pilot bearing and install it on mainshaft.

Assemble main drive gear assembly on the front end of mainshaft.

10. Press counter drive gear onto counter gear with Counter Gear Drift ST23860000 by meshing gears and secure counter drive gear with thicker snap ring.

Counter drive gear snap ring:

Refer to Service Data and Specifications.

Note: Be sure to drive in counter drive gear and main drive gear simultaneously.

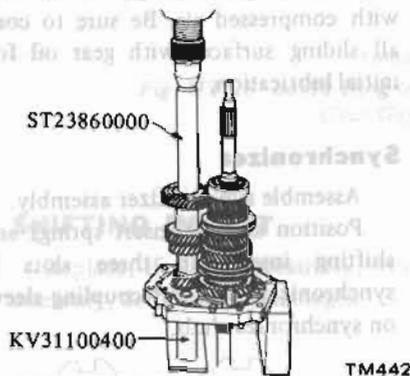


Fig. MT-37 Installing Counter Drive Gear

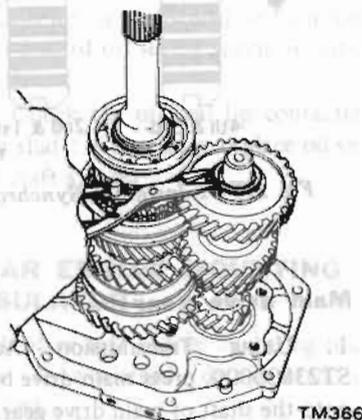


Fig. MT-38 Installing Snap Ring

11. Press counter gear front bearing onto counter gear with Bearing Drift ST22360002.

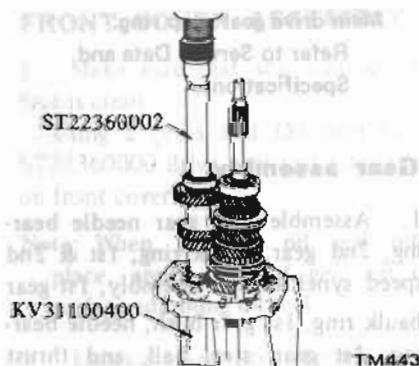


Fig. MT-39 Installing Counter Gear Front Bearing

12. Support adapter plate in a vise with Setting Plate Adapter ST23810001, with mainshaft facing down.

13. Install reverse main gear, plain washer on the rear of mainshaft and install mainshaft nut.

Tighten mainshaft nut temporarily.

14. Install counter reverse gear on the rear of counter gear and secure with snap ring.

Use snap ring to give a minimum gear end play.

Counter reverse gear snap ring:
Refer to Service Data and Specifications.

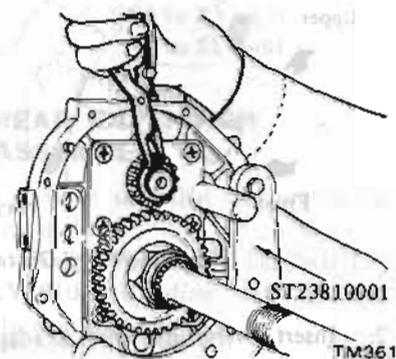


Fig. MT-40 Installing Counter Reverse Gear Snap Ring

15. Install reverse idler gear on reverse idler shaft.

16. Tighten mainshaft lock nut using the Wrench ST22520000 and torque wrench.

Ⓣ **Tightening torque:**
Mainshaft lock
14 to 17 kg-m
(101 to 123 ft·lb)

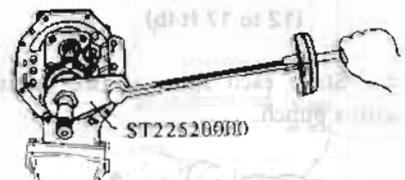


Fig. MT-41 Tightening Mainshaft Nut

Explanation of converted torque

Mainshaft nut should be tightened

to 14 to 17 kg-m (101 to 123 ft-lb) torque with the aid of Wrench ST22520000. When doing so, the amount of torque to be read on wrench needle should be modified according to the following formula:

$$C \text{ kg-m} = 14 \times \left(\frac{L}{L + 0.10} \right) \text{ to } 17 \times \left(\frac{L}{L + 0.10} \right)$$

or

$$C \text{ (ft-lb)} = 101 \times \left(\frac{L}{L + 0.33} \right) \text{ to } 123 \times \left(\frac{L}{L + 0.33} \right)$$

Where,

C: Value read on the torque wrench kg-m (ft-lb)

L: Effective length of torque wrench m (ft)

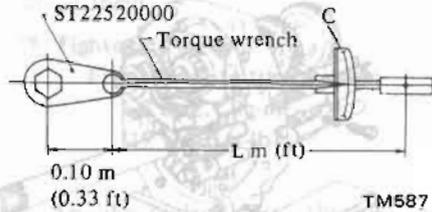


Fig. MT-42 Setting Wrench

Example,

When a 0.40 m (1.31 ft)-long torque wrench is used, the "C" in Fig. MT-43 will be 11.2 to 13.6 kg-m (81 to 98 ft-lb).

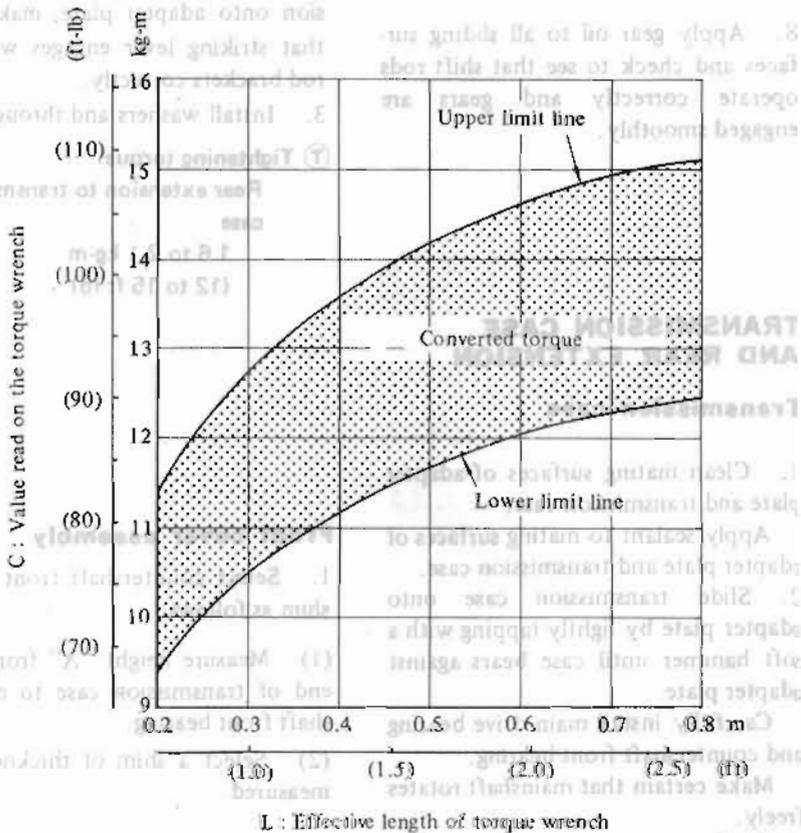


Fig. MT-43 Converted Torque

17. Stake mainshaft lock nut to groove of mainshaft with a punch.

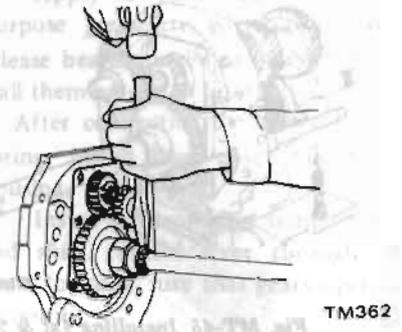


Fig. MT-44 Staking Mainshaft Nut

18. Measure gear end play and backlash.

Make sure that they are held within the specified values.

For details, refer to the instructions under topic "Inspection".

Note: The main drive gear and counter drive gear should be handled as a matched set.

When you replace a main drive gear or counter drive gear, be sure to replace as a set of main drive gear and counter drive gear.

Shift forks and fork rods

1. Place 1st & 2nd shift fork in groove in 1st & 2nd coupling sleeve, and slide 1st & 2nd fork rod through adapter plate and 1st & 2nd shift fork. Prior to installing 1st & 2nd fork rod, install 3rd & 4th shift fork in groove in 3rd & 4th coupling sleeve.


Note: Shift forks for 1st & 2nd and 3rd & 4th are one and the same parts.

Make sure that the long end of shift fork for 1st & 2nd is placed on the counter gear side and the long end for 3rd & 4th is on the opposite side.

Secure 1st & 2nd fork rod to shift fork with a new retaining pin.

2. Install check ball, check ball spring, and check ball plug. Prior to tightening check ball plug, apply sealant to check ball plug.

Align notch in 1st & 2nd fork rod with check ball.

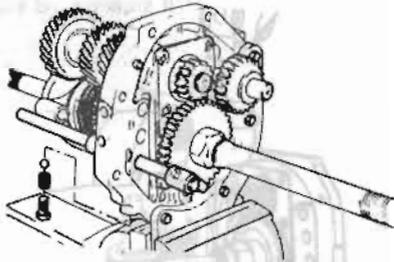

TM367

Fig. MT-45 Installing 1st & 2nd Fork Rod


3. Slide 3rd & 4th fork rod through adapter plate and 3rd & 4th shift fork, and secure with a new retaining pin.

Note: Prior to assembling 3rd & 4th fork rod, install two interlock balls into adapter plate as shown in Fig. MT-15.

4. Install check ball and check ball spring.

Apply sealant to check ball plug and install it in place.

Align notch in 3rd & 4th fork rod with check ball by sliding 3rd & 4th fork rod as necessary.

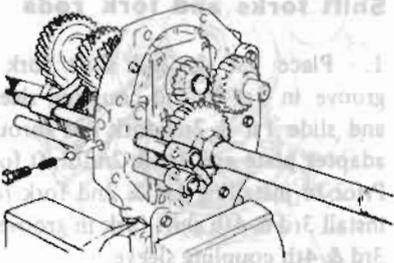

TM368

Fig. MT-46 Installing 3rd & 4th Fork Rod

5. Place reverse shift fork in reverse idler gear.

Slide reverse fork rod through reverse shift fork and adapter plate, and secure with a new retaining pin.


Note: Prior to assembling reverse fork rod, install two interlock balls into adapter plate as shown in Fig. MT-15.

6. Install check ball and check ball

spring.

Apply sealant to check ball plug and install it in place.

Align notch in reverse fork rod with check ball.

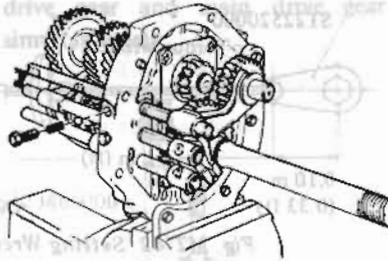

TM369


Fig. MT-47 Installing Reverse Fork Rod

7. Torque each check ball plug.

- ⊕ Tightening torque:
 Check ball plug
 1.9 to 2.5 kg-m
 (14 to 18 ft-lb)

Note: Ball plug for 1st & 2nd fork rod is longer than those for reverse shift fork rod and 3rd & 4th fork rod.

8. Apply gear oil to all sliding surfaces and check to see that shift rods operate correctly and gears are engaged smoothly.

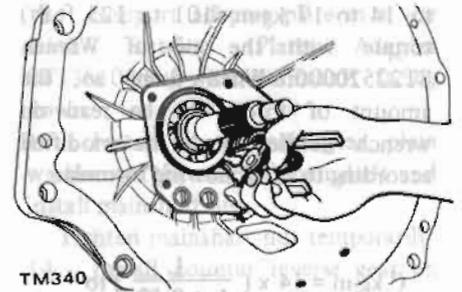

TM340

Fig. MT-48 Fitting Main Drive Bearing Snap Ring

Rear extension

1. Clean mating surfaces of adapter plate and rear extension.

Apply sealant to mating surfaces of adapter plate and rear extension.

2. With fork rods in their neutral positions, gradually slide rear extension onto adapter plate, making sure that striking lever engages with fork rod brackets correctly.

3. Install washers and through-bolts.

- ⊕ Tightening torque:
 Rear extension to transmission case
 1.6 to 2.1 kg-m
 (12 to 15 ft-lb)

TRANSMISSION CASE AND REAR EXTENSION

Transmission case

1. Clean mating surfaces of adapter plate and transmission case.

Apply sealant to mating surfaces of adapter plate and transmission case.

2. Slide transmission case onto adapter plate by lightly tapping with a soft hammer until case bears against adapter plate.

Carefully install main drive bearing and countershaft front bearing.

Make certain that mainshaft rotates freely.

3. Fit main drive bearing snap ring to groove in main drive bearing by using Expander.


Front cover assembly

1. Select countershaft front bearing shim as follows:

(1) Measure height "A" from front end of transmission case to countershaft front bearing.

(2) Select a shim of thickness "A" measured.

Counter gear front bearing shim:
 Refer to Service Data and Specifications.

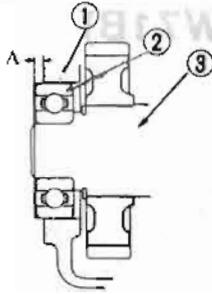

- 1 Transmission case
- 2 Counter gear front bearing
- 3 Counter gear

TM371

Fig. MT-49 Selecting Counter Gear Front Bearing Shim

- 2. Clean mating surfaces of front cover and transmission case.

Apply grease to shim selected to retain it on front cover; install front cover to transmission case with gasket in place.

Install through-bolts with washers under them.

Tightening torque:

Front cover to transmission
1.6 to 2.1 kg-m
(12 to 15 ft-lb)

Apply sealant to threads of through-bolts before installation.

- 3. Install speedometer pinion.
- 4. Install back-up lamp switch.

Tightening torque:

Back-up lamp switch
2.0 to 3.0 kg-m
(14 to 22 ft-lb)


Be sure to apply sealant before installation.

5. Apply a light coat of multi-purpose grease to withdrawal lever, release bearing and bearing sleeve; install them on clutch housing.


After connecting them with holder spring, install dust cover on clutch housing.

6. Install control lever temporarily, and shift control lever through all gears to make sure that gears operate smoothly.

Note: Install drain plug and filler plug with sealant in place.

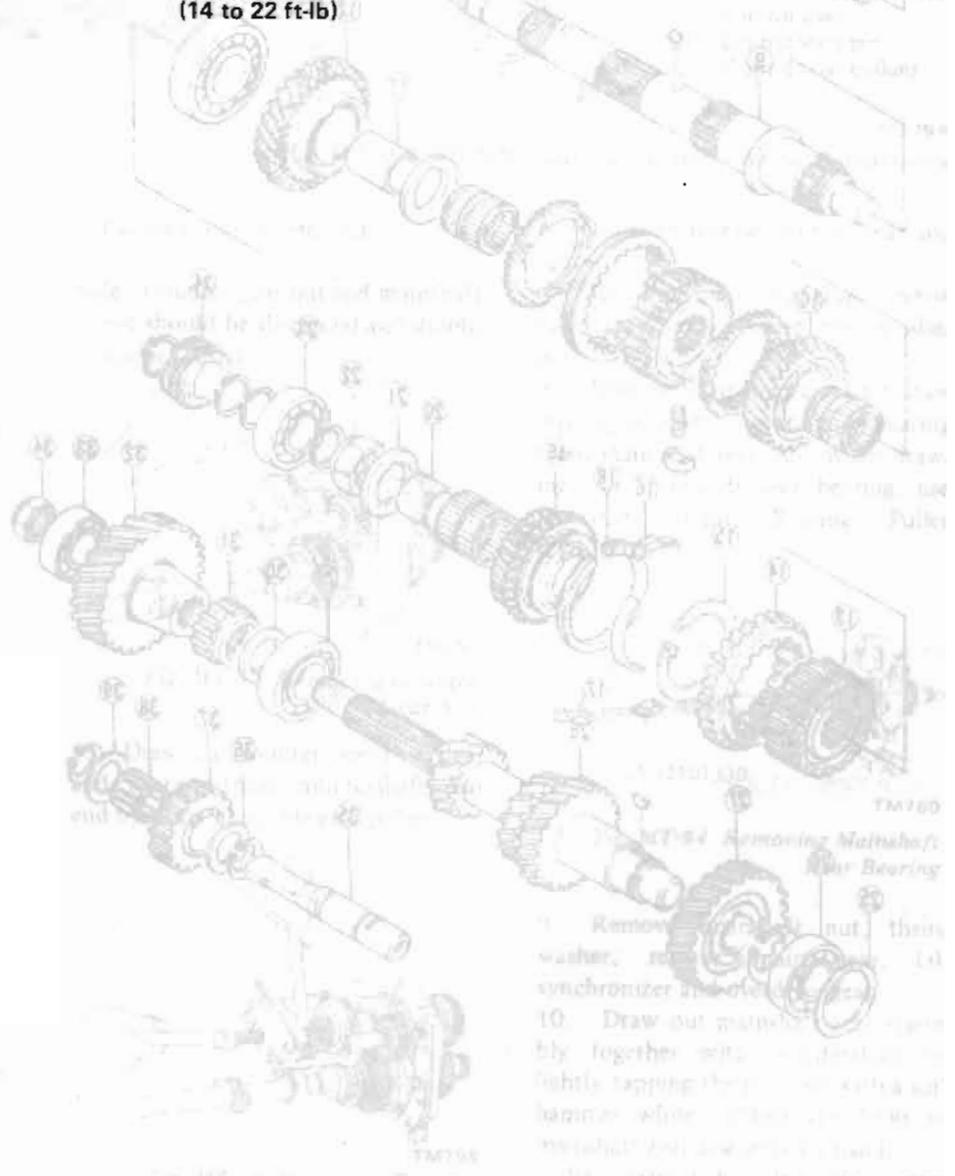


5-SPEED TRANSMISSION (Type : FS5W71B)

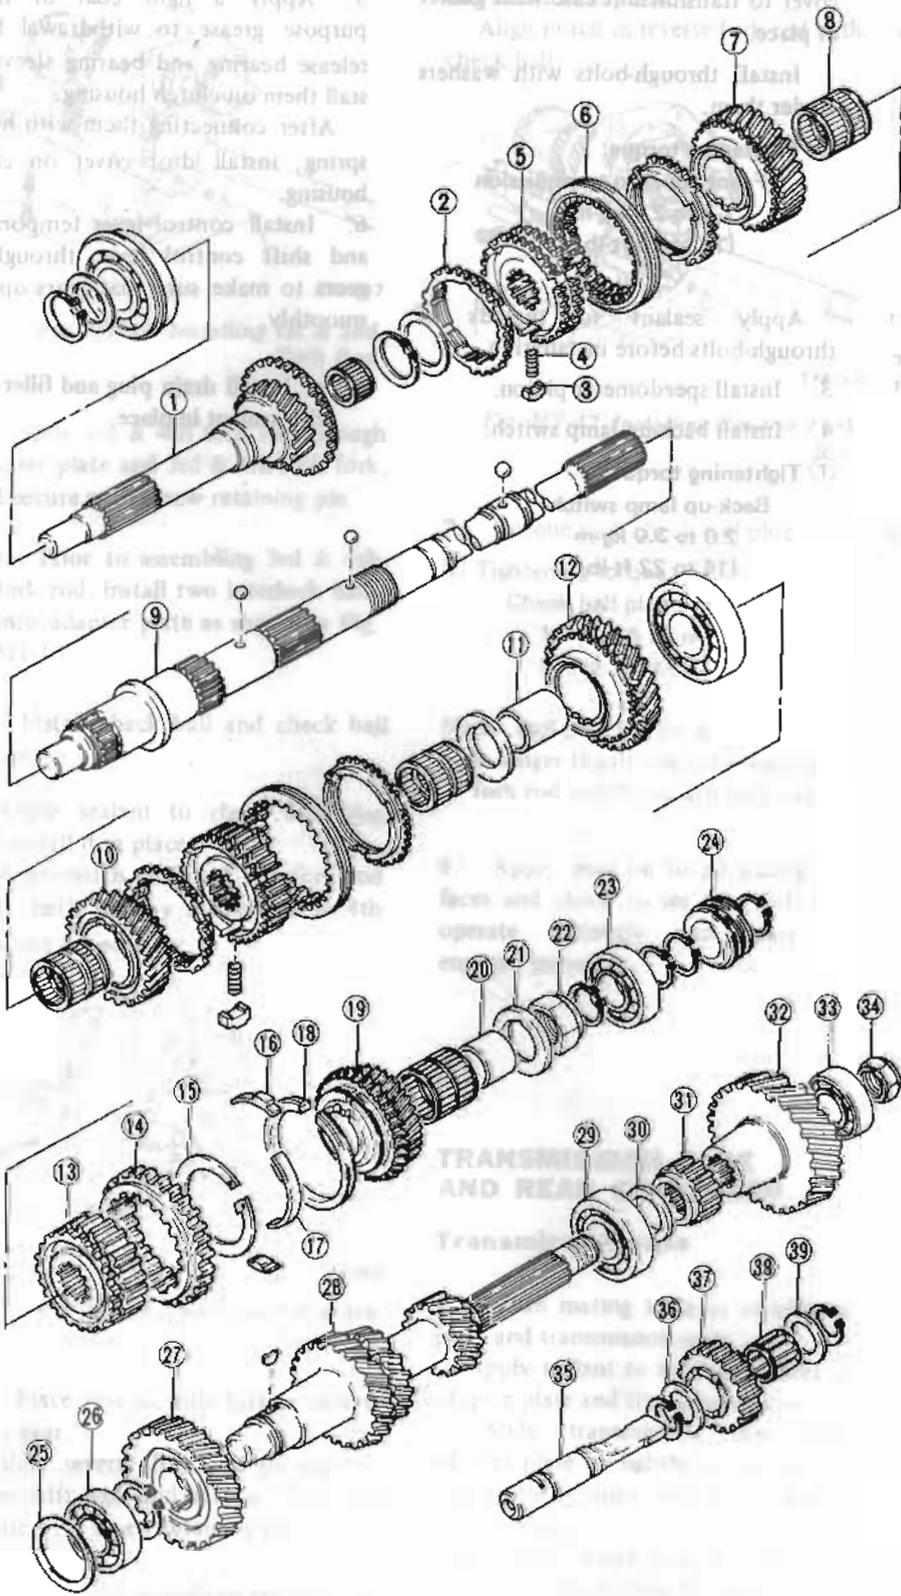

- 1 Main drive gear
- 2 Baulk ring
- 3 Shifting insert
- 4 Shifting insert spring
- 5 Synchronizer hub
- 6 Coupling sleeve
- 7 3rd main gear
- 8 Needle bearing
- 9 Mainshaft
- 10 2nd main gear
- 11 Bushing
- 12 1st main gear
- 13 OD-reverse synchronizer hub
- 14 *Reverse main gear
- 15 Circlip
- 16 Thrust block
- 17 Brake band
- 18 Synchronizer ring
- 19 Overdrive main gear
- 20 Overdrive gear bushing
- 21 Washer
- 22 Mainshaft nut
- 23 Mainshaft rear bearing
- 24 Speedometer drive gear
- 25 Counter gear front bearing shim
- 26 Counter gear front bearing
- 27 Counter drive gear
- 28 Counter gear
- 29 Counter gear bearing
- 30 Reverse counter gear spacer
- 31 Reverse counter gear
- 32 Overdrive counter gear
- 33 Counter gear rear bearing
- 34 Counter gear nut
- 35 Reverse idler shaft
- 36 Reverse idler thrust washer
- 37 Reverse idler gear
- 38 Reverse idler gear bearing
- 39 Reverse idler thrust washer

TM279A

Fig. MT-50 FS5W71B Transmission Gear Components

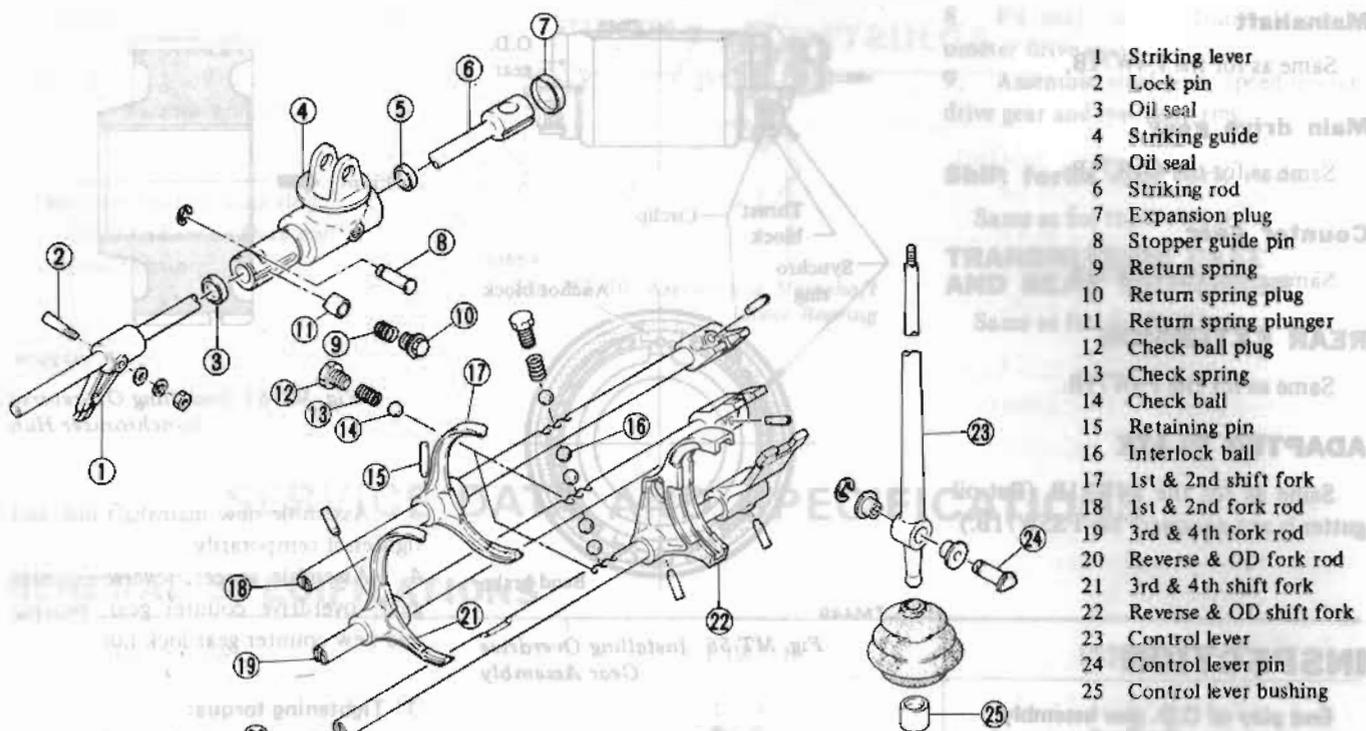

MT279A

Fig. MT-51 FS5W71B Transmission Shift Control Components

REMOVAL AND INSTALLATION

Same as for the F4W71B.

DISASSEMBLY

Disassembly and assembly procedures are almost the same as those for the F4W71B. Unless otherwise noted, refer to the F4W71B.

TRANSMISSION CASE AND REAR EXTENSION

Same as for the F4W71B.

GEAR ASSEMBLY

Shift forks and fork rods


Same as for the F4W71B.

Gear assembly

1. Remove counter gear front bearing.
2. Remove counter drive gear snap ring.
3. Draw out counter drive gear and main drive gear.
4. With gears doubly engaged, release staking on counter gear nut and mainshaft nut then loosen them.

Remove counter gear nut.


Note: Counter gear nut and mainshaft nut should be discarded and should not be reused.

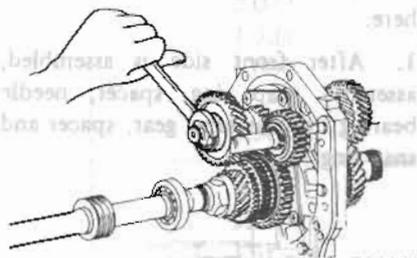

TM757

Fig. MT-52 Removing Counter Gear Nut

5. Draw out counter overdrive gear and bearing from countershaft rear end by using a suitable gear puller.

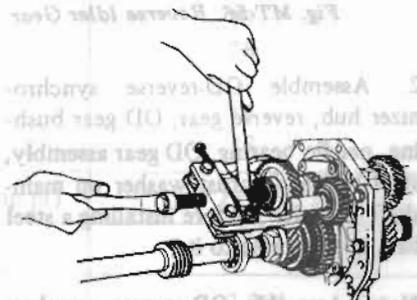


TM758

Fig. MT-53 Removing Counter Overdrive Gear and Bearing

6. Remove reverse counter gear and spacer.

7. Remove snap ring from reverse idler shaft, and remove reverse idler gear.

8. Remove snap rings and then draw out speedometer gear and bearing from mainshaft rear side. When drawing out mainshaft rear bearing, use Mainshaft Rear Bearing Puller KV32101330.

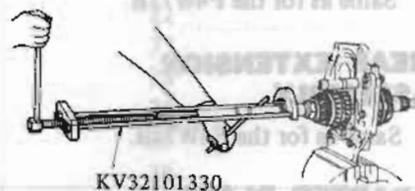

TM760

Fig. MT-54 Removing Mainshaft Rear Bearing

9. Remove mainshaft nut, thrust washer, reverse main gear, OD synchronizer and overdrive gear.

10. Draw out mainshaft gear assembly together with countershaft by lightly tapping the rear end with a soft hammer while holding the front of mainshaft gear assembly by hand.

Be careful not to drop off counter gear.

Mainshaft

Same as for the F4W71B.

Main drive gear

Same as for the F4W71B.

Counter gear

Same as for the F4W71B.

REAR EXTENSION

Same as for the F4W71B.

ADAPTER PLATE

Same as for the F4W71B. (But oil gutter is not necessary for F55W71B.)

INSPECTION

End play of O.D. gear assembly:

0.10 to 0.17 mm
(0.0039 to 0.0067 in)

Reverse idler gear:

0.05 to 0.50 mm
(0.0020 to 0.0197 in)

Other parts are same as for the F4W71B.

ASSEMBLY

FRONT COVER ASSEMBLY

Same as for the F4W71B.

REAR EXTENSION ASSEMBLY

Same as for the F4W71B.

ADAPTER PLATE

Same as for the F4W71B.


GEARS

1st & 2nd and 3rd & 4th gear synchronizer

Same as for the F4W71B.

OD gear synchronizer

Position synchronizer ring, band brake, thrust block and anchor block on overdrive clutch gear; install circlip.

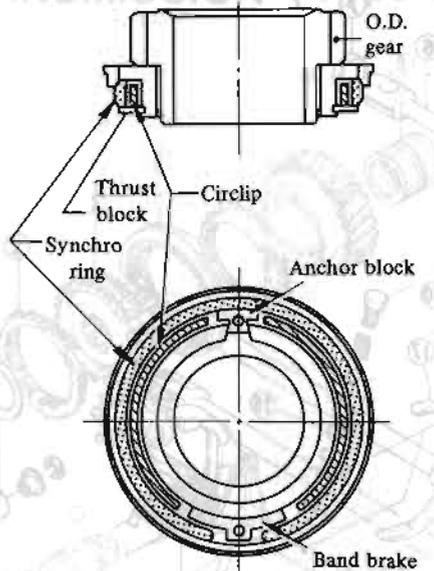

TM449

Fig. MT-55 Installing Overdrive Gear Assembly


Main drive gear

Same as for the F4W71B.

Gear assembly

Assembly procedure for the front side is the same as that for the F4W71B. So only rear side is described here.

1. After front side is assembled, assemble snap ring, spacer, needle bearing, reverse idler gear, spacer and snap ring.

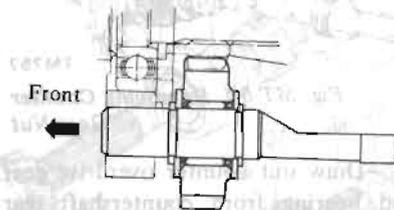


TM451

Fig. MT-56 Reverse Idler Gear

2. Assemble OD-reverse synchronizer hub, reverse gear, OD gear bushing, needle bearing, OD gear assembly, steel ball and thrust washer on mainshaft rear side. Before installing a steel ball, apply grease to it.

Note: Assemble OD-reverse synchronizer hub, paying attention to its direction.

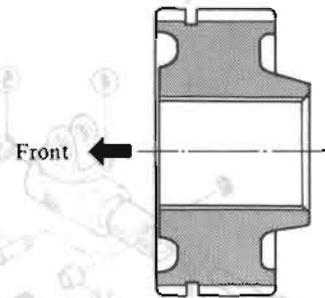


TM297A

Fig. MT-57 Installing OD-reverse Synchronizer Hub

3. Assemble new mainshaft nut, and tighten it temporarily.
4. Assemble spacer, reverse counter gear, overdrive counter gear, bearing and new counter gear lock nut.

Ⓣ Tightening torque:
Counter gear lock nut
10.0 to 13.0 kg-m
(72 to 94 ft-lb)

5. With gears doubly engaged, tighten mainshaft lock nut.

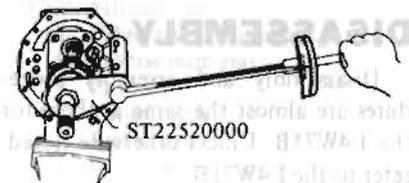


ST22520000

TM768

Fig. MT-58 Tightening Mainshaft Nut


6. Stake mainshaft and counter gear nuts to groove of mainshaft and counter gear with a punch.

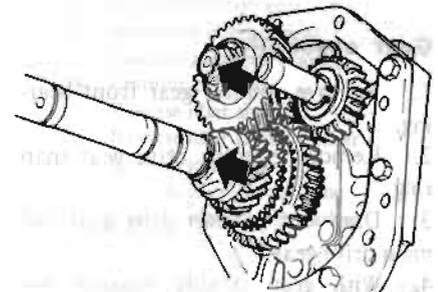

TM130A

Fig. MT-59 Staking Mainshaft Nuts

7. Assemble mainshaft rear bearing using Bearing Drift ST22350000. Fit thick snap ring to the rear side of bearing to eliminate end play.

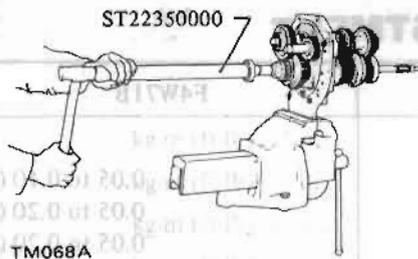

Main rear bearing snap ring:
Refer to Service Data and Specifications.

TM068A

Fig. MT-60 Assembling Mainshaft Rear Bearing

8. Fit snap ring to front of speedometer drive gear.
9. Assemble steel ball, speedometer drive gear and rear snap ring.

Shift forks and fork rods

Same as for the F4W71B.

TRANSMISSION CASE AND REAR EXTENSION

Same as for the F4W71B.

SERVICE DATA AND SPECIFICATIONS


GENERAL SPECIFICATIONS

Transmission type	F4W71B	FS5W71B
Shift pattern		
Synchronmesh type	Warner	1st to 4th Warner, 5th Servo
Gear ratio		
1st	3.321	3.321
2nd	2.077	2.077
3rd	1.308	1.308
4th	1.000	1.000
5th	—	0.864
Reverse	3.382	3.382
Number of teeth		
Main drive gear	22	22
Main gear		
1st	33	33
2nd	28	28
3rd	26	26
5th	—	19
Reverse	36	36
Counter drive gear	31	31
Counter gear		
1st	14	14
2nd	19	19
3rd	28	28
5th	—	31
Reverse	15	15
Reverse idler gear	23	23
Oil capacity	liter (US pt, Imp pt)	
	1.7 (3 3/8, 3)	2.0 (4 1/4, 3 1/2)
Speedometer gear ratio	16/6	16/6 *18/6
Final gear ratio	3.364	3.364 *3.700
Tire size	195/70HR-14	195/70HR-14

*S130J model

INSPECTION AND ADJUSTMENT

Transmission type	F4W71B	FS5W71B
Gear backlash mm (in)		
Main drive gear	0.05 to 0.10 (0.0020 to 0.0039)	
1st gear	0.05 to 0.20 (0.0020 to 0.0079)	
2nd gear	0.05 to 0.20 (0.0020 to 0.0079)	
3rd gear	0.05 to 0.20 (0.0020 to 0.0079)	
5th gear		0.05 to 0.20 (0.0020 to 0.0079)
Reverse idler gear	0.05 to 0.20 (0.0020 to 0.0079)	
Gear end play mm (in)		
1st gear	0.27 to 0.34 (0.0106 to 0.0134)	
2nd gear	0.12 to 0.19 (0.0047 to 0.0075)	
3rd gear	0.13 to 0.37 (0.0051 to 0.0146)	
5th gear		0.10 to 0.17 (0.0039 to 0.0067)
Reverse counter gear	Less than 0.20 (0.0079)	
Reverse idler gear		0.05 to 0.50 (0.0020 to 0.0197)
Baulk ring to cone gap mm (in)		
Standard	1.20 to 1.60 (0.0472 to 0.0630)	
Allowable limit		0.8 (0.0315)
Main drive gear snap ring mm (in)		
		1.73 (0.0681)
		1.80 (0.0709)
		1.87 (0.0736)
		1.94 (0.0764)
		2.01 (0.0791)
		2.08 (0.0819)
Mainshaft front snap ring mm (in)		
		1.4 (0.055)
		1.5 (0.059)
		1.6 (0.063)
Mainshaft rear bearing snap ring mm (in)		
		1.1 (0.043)
		1.2 (0.047)
		1.3 (0.051)
		1.4 (0.055)
Counter drive gear snap ring mm (in)		
		1.4 (0.055)
		1.5 (0.059)
		1.6 (0.063)
Counter reverse gear snap ring mm (in)		
	1.4 (0.055)	
	1.5 (0.059)	
	1.6 (0.063)	
Counter gear front bearing shim mm (in)	"A" Counter gear front bearing shim	
	3.42 to 3.51 (0.1346 to 0.1382)	0.1 (0.004)
	3.32 to 3.41 (0.1307 to 0.1343)	0.2 (0.008)
	3.22 to 3.31 (0.1268 to 0.1303)	0.3 (0.012)
	3.12 to 3.21 (0.1228 to 0.1264)	0.4 (0.016)
	3.02 to 3.11 (0.1189 to 0.1224)	0.5 (0.020)
	2.92 to 3.01 (0.1150 to 0.1185)	0.6 (0.024)

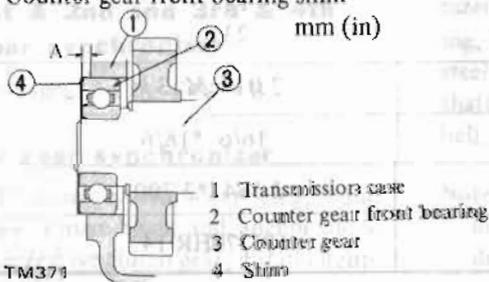

TM371

TIGHTENING TORQUE

Transmission installation

Clutch operating cylinder	kg-m (ft-lb)	3.1 to 4.1 (22 to 30)
Transmission to engine	kg-m (ft-lb)	4.4 to 5.9 (32 to 43)
Engine rear plate to transmission	kg-m (ft-lb)	0.9 to 1.2 (6.5 to 8.7)
Crossmember to body	kg-m (ft-lb)	3.2 to 4.3 (23 to 31)
Rear mounting insulator to crossmember	kg-m (ft-lb)	3.2 to 4.3 (23 to 31)
Rear mounting insulator to rear extension	kg-m (ft-lb)	3.2 to 4.3 (23 to 31)
Transmission case to rear extension	kg-m (ft-lb)	1.6 to 2.1 (12 to 15)
Starter motor to transmission	kg-m (ft-lb)	3.0 to 4.0 (22 to 29)

Gear assembly

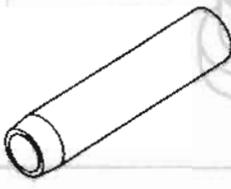
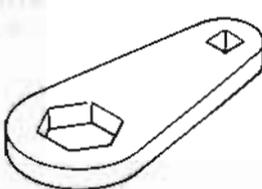
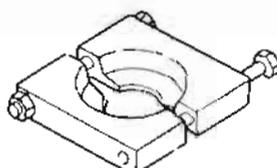
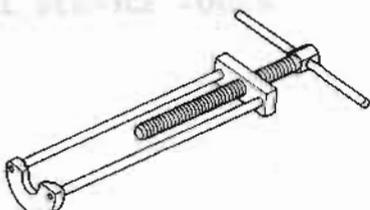
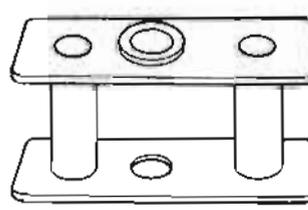
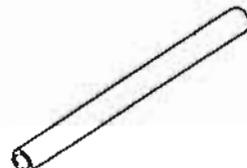
Bearing retainer to adapter plate	kg-m (ft-lb)	1.6 to 2.3 (12 to 17)
Mainshaft lock nut	kg-m (ft-lb)	14.0 to 17.0 (101 to 123)
Counter gear lock nut (FS5W71B only)	kg-m (ft-lb)	10.0 to 13.0 (72 to 94)
Rear extension to transmission case	kg-m (ft-lb)	1.6 to 2.1 (12 to 15)
Front cover to transmission case	kg-m (ft-lb)	1.6 to 2.1 (12 to 15)
Filler plug	kg-m (ft-lb)	2.5 to 3.5 (18 to 25)
Drain plug	kg-m (ft-lb)	2.5 to 3.5 (18 to 25)
Ball pin	kg-m (ft-lb)	1.6 to 2.1 (12 to 15)
Striking lever lock nut	kg-m (ft-lb)	0.9 to 1.2 (6.5 to 8.7)
Check ball plug	kg-m (ft-lb)	1.9 to 2.5 (14 to 18)
Speedometer sleeve installation	kg-m (ft-lb)	0.4 to 0.5 (2.9 to 3.6)
Reverse back-up lamp switch	kg-m (ft-lb)	2.0 to 3.0 (14 to 22)
Return spring plug	kg-m (ft-lb)	0.8 to 1.0 (5.8 to 7.2)

Fig. MT-33
Fig. MT-34
Fig. MT-35
Fig. MT-37
Fig. MT-39

INSPECTIVE TIGHTENING TROUBLE DIAGNOSES AND CORRECTIONS


Condition	Probable cause	Corrective action
<p>Difficult to intermesh gears</p> <p>Causes for difficult gear shifting are classified to troubles concerning control system and transmission. When gear shift lever is heavy and it is difficult to shift gears, clutch disengagement may also be unsmooth. First, make sure that clutch operates correctly, and inspect transmission.</p>	<p>Worn gears, shaft, and/or bearing.</p> <p>Insufficient operating stroke due to worn or loose sliding part.</p> <p>Faulty or damaged synchronizer.</p>	<p>Replace.</p> <p>Repair or replace.</p> <p>Replace.</p>
<p>Gear slips out of mesh.</p> <p>In most cases, this trouble occurs, when interlock ball, check ball, and/or spring is worn or weakened, or when control system is faulty. In this case, the trouble cannot be corrected by replacing gears, and therefore, trouble shooting must be carried out carefully. It should also be noted that gear slips out of mesh due to vibration generated by weakened front and rear engine mounts.</p>	<p>Worn interlock ball.</p> <p>Worn check ball and/or weakened or broken spring.</p> <p>Worn fork rod ball groove.</p> <p>Worn or damaged bearing.</p> <p>Worn or damaged gear.</p>	<p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Replace.</p>
<p>Noise</p> <p>When noise occurs with engine idling and ceases when clutch is disengaged, or when noise occurs while shifting gears, it is an indication that the noise is from transmission.</p> <p>(Transmission may rattle during engine idling. Check air-fuel mixture and ignition timing. After above procedure, readjust engine idling.)</p>	<p>Insufficient or improper lubricant.</p> <p>Oil leaking due to faulty oil seal or sealant, clogged breather, etc.</p> <p>Worn bearing (High humming occurs at a high speed.).</p> <p>Damaged bearing (Cyclic knocking sound occurs also at a low speed.).</p> <p>Worn spline.</p> <p>Worn bushing.</p>	<p>Add oil or replace with designated oil.</p> <p>Clean or replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Replace.</p>

SPECIAL SERVICE TOOLS

Tool number & tool name		Kent-Moore No. Reference page or Fig. No.	Tool number & tool name		Kent-Moore No. Reference page or Fig. No.
		Unit application			Unit application
ST23810001 Setting plate adapter 	J25693 Fig. MT-13 Fig. MT-14 Fig. MT-40 Page MT-5 Page MT-10 *	ST22360002 Bearing drift 	J25679 Fig. MT-39 Page MT-10 *		
KV31100300 Fork rod pin punch 	— Fig. MT-14 Page MT-5 *	ST22520000 Wrench 	— Fig. MT-41 Fig. MT-42 Fig. MT-58 Page MT-10 Page MT-11 *		
ST30031000 Bearing puller 	J 25733-1 Fig. MT-21 Fig. MT-22 Fig. MT-23 Page MT-7 *	KV32101330 Bearing puller 	— Fig. MT-54 Page MT-15 FS5W71B		
KV31100400 Transmission press stand 	— Fig. MT-33 Fig. MT-34 Fig. MT-35 Fig. MT-37 Fig. MT-39 *	ST22350000 Mainshaft bearing drift 	J25678 Fig. MT-60 Page MT-17 FS5W71B		
ST23860000 Counter gear drift 	— Fig. MT-37 Page MT-10 *	ST23800000 Transmission adapter 	J25691 Page MT-9 *		

*: Applicable to all S130 series models

Manual Transmission

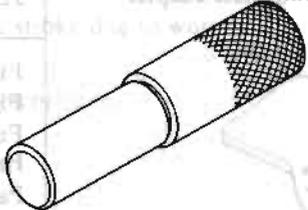	Kent-Moore No.		Kent-Moore No.
Tool number & tool name	Reference page or Fig. No.	Tool number & tool name	Reference page or Fig. No.
	Unit application		Unit application
KV38104010 Oil seal drift 	— Page MT-8 *	ST35360000 Oil seal drift 	— Page MT-8 *

*: Applicable to all S130 series models